



SITE RADIO

DC011-----A

TYPE 1



Item No	Qty	Part Number	Description	Part Price	Variants
1	1	5140019-01	FRAME		
2	2	5140019-02	SPEAKER		
3	1	596800-03	PANEL.FRONT		
4	1	5140019-04	BUTTON SA		
5	2	5140019-05	SPEAKER		
6	1	5140019-06	BUTTON		
7	1	596800-07	PCB SA		
8	1	5140019-08	CHASSIS		
9	1	5140019-09	FUSE		
10	1	596800-10	CONTROL		
11	1	5140019-11	BOX		
12	1	5140019-12	HOLDER SA		
13	1	5140019-13	HOLDER		
14	1	596800-60	TRANSFORMER		QS
15	1	596800-15	PCB SA		
17	1	5140019-17	FUSE		
18	1	596800-18	BOARD		
19	1	5140019-19	BRACKET		
20	1	5140019-20	PROTECTOR		
21	1	5140019-21	KNOB		
22	1	5140019-22	KNOB		
23	1	5140019-23	LATCH		
24	1	5140019-24	BATTERY COVER		
25	1	5140019-25	DOOR		
26	1	5140019-26	HANDLE UPPER		
27	1	5140019-27	HOLDER,RUBBER		
28	1	5140019-28	ANTENNA		
29	1	5140019-29	COVER		
30	1	5140019-30	PROTECTOR		
31	1	5140019-31	CASE		
33	1	5140019-33	BRACKET		
34	6	429790-20	SHOCK ABSORBER		
35	1	5140019-35	CONTACT		
36	1	596800-36	PCB SA		
37	1	596800-37	PCB SA		
38	1	5140019-38	COVER		
39	1	596800-39	PCB SA		
40	1	5140019-40	SEAL		
41	1	596800-41	CONTACT		
42	1	596800-42	PCB SA		
43	1	596800-43	CHARGER SA		QS
44	1	596800-44	LED		
45	1	5140019-45	SEAL		
46	4	5140019-46	DUCT		
47	1	5140019-47	PARTS PACK		
49	1	568625-00	CORDSET (EURO)		QS